 


Size: 11.75" x 8.25"
Color: Black

BEN 10

ALIEN PROJECTION OMNITRIX

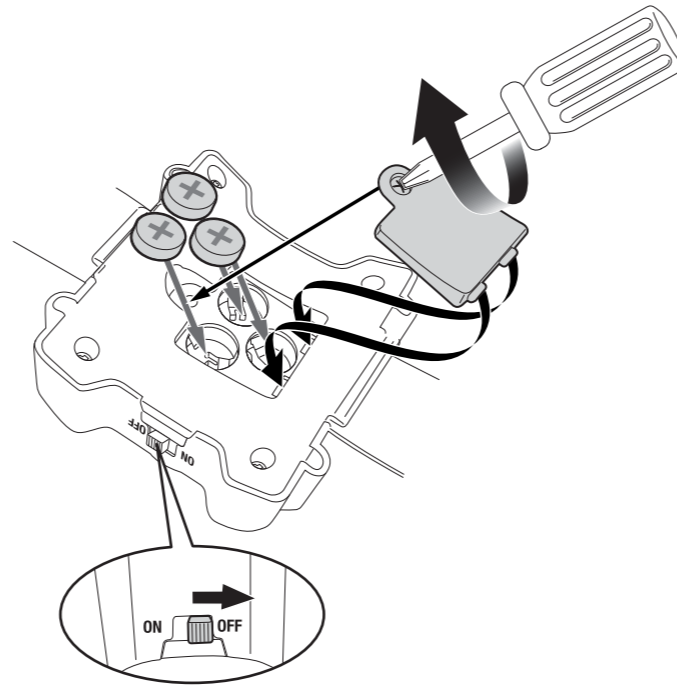

If Omnitrix is not working, try resetting.

To Reset: Slide the switch to "OFF", then slide the switch to the "ON" mode. If Omnitrix is still not working, try replacing the batteries.

To Change Batteries:

 
- Unscrew battery cap.
- Take out old batteries and replace with 3 new AG13/LR44 batteries.
- Replace battery cap.

Battery Instructions:


- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Batteries are to be removed from the toys when not in use.
- Batteries should only be replaced by an adult.
- Do not dispose of batteries in fire.
- Do not use rechargeable batteries.

Batteries are included for demonstration purposes only and may need to be replaced by the consumer. Adult supervision is required to replace batteries.

Batteries Regulation: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

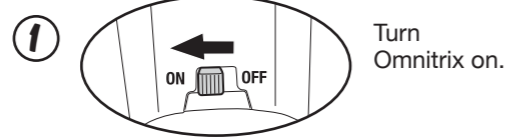

Turn Omnitrix on.

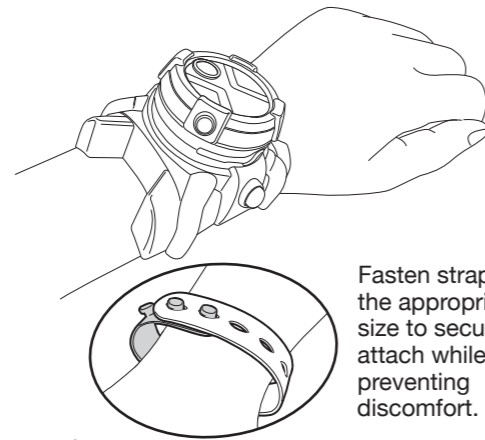 


Fasten straps to the appropriate size to securely attach while preventing discomfort.

Ages 4 and up
Asst. #76950
Item #76952




BEN 10, CARTOON NETWORK, the logos, and all related characters and elements are trademarks of and ©2018 Cartoon Network. ©2018 Playmates. Playmates International Company Ltd. 23/F, The Toy House, 100 Canton Road, TST, Kowloon, Hong Kong. PRINTED IN CHINA.

 
- 2
- Insert disc into slot, with groove facing towards watch.
 - Make sure disc fully clicks into position.
 - Side marked "TOP" on the disc should face up.

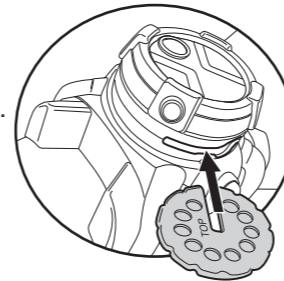

 
- 3
- To project, press and hold button down.

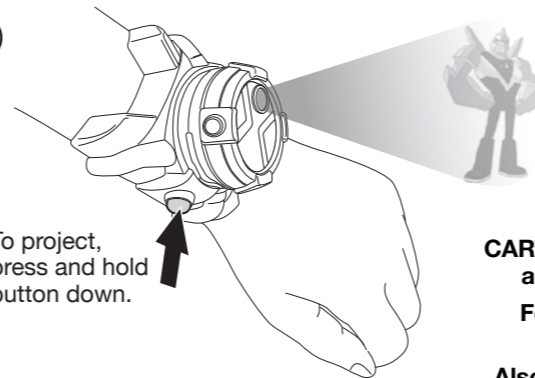

 - 4
- Turn dial to select different aliens.

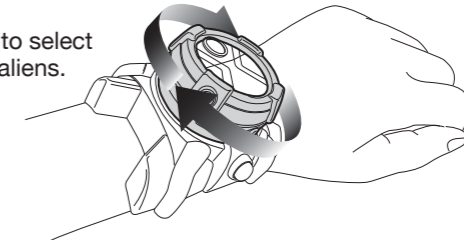

 - 5
- To remove disc, turn dial until inner button is seen through small opening.
 - Then push button with watch tilted forward. Disc will fall out.

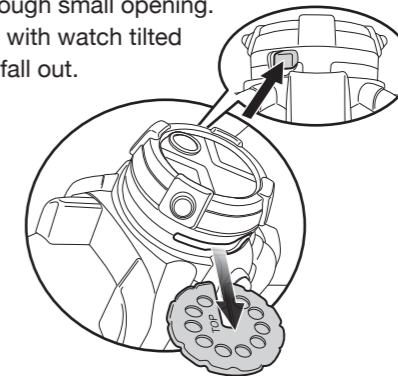

Catch Ben 10 on
CARTOON NETWORK and unleash more
alien super powers at BEN10.COM

For more detailed instructions visit
www.Playmatestoys.com

Also find us on YouTube and Facebook:
<https://www.youtube.com/ben10toys>
<https://www.facebook.com/ben10toys>