



ALIEN WATCH OMNITRIX

 
If Omnitrix is not working, try resetting.

To Reset:

If Omnitrix not working, try replacing the batteries.

To Change Batteries:

- Unscrew battery cap.
- Take out old batteries and replace with 3 new AG13/LR44 batteries.
- Replace battery cap.

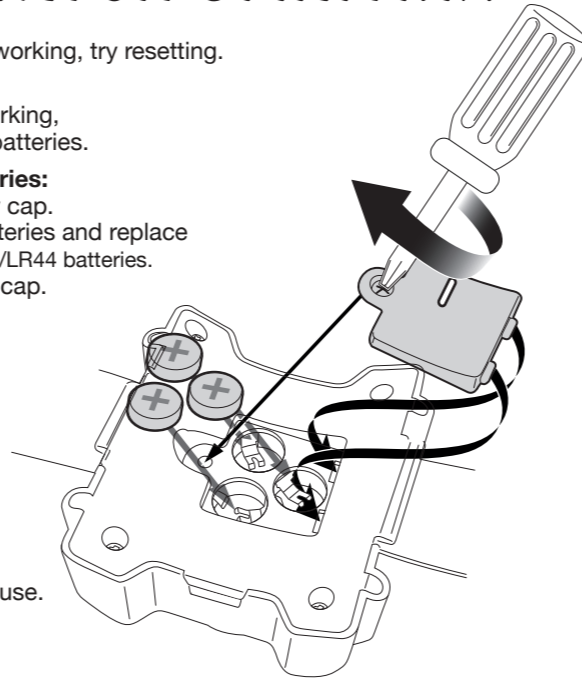

Battery Instructions:

- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Batteries are to be removed from the toys when not in use.
- Batteries should only be replaced by an adult.
- Do not dispose of batteries in fire.
- Do not use rechargeable batteries.

Batteries are included for demonstration purposes only and may need to be replaced by the consumer. Adult supervision is required to replace batteries.

Batteries Regulation:

 
Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Under the environment with severe electrostatic discharge, the product may malfunction and requires user reset.


Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

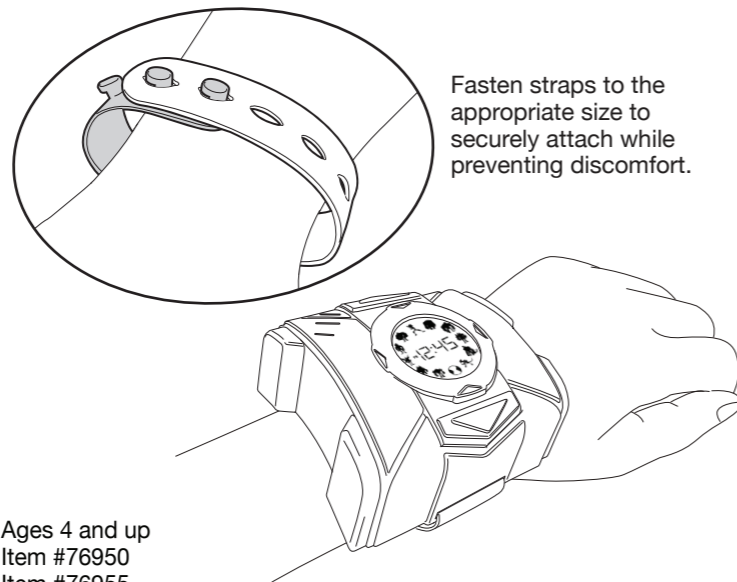


 Fasten straps to the appropriate size to securely attach while preventing discomfort.

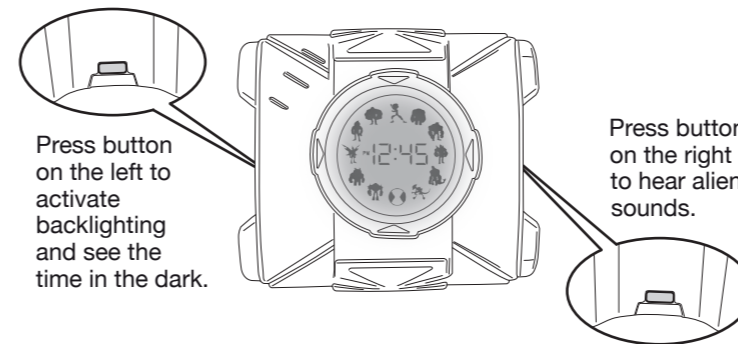

Press button on the left to activate backlighting and see the time in the dark.

 Press button on the right to hear alien sounds.

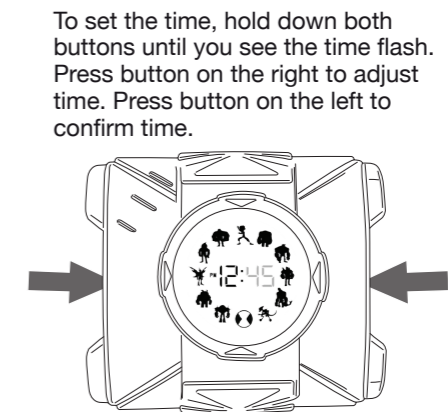

To set the time, hold down both buttons until you see the time flash. Press button on the right to adjust time. Press button on the left to confirm time.

To activate an hourly reminder with alien sounds, hold down button on the right until the display shows "ON". To deactivate this function, adjust to "OFF".

Ages 4 and up
Item #76950
Item #76955



BEN 10, CARTOON NETWORK, the logos, and all related characters and elements are trademarks of and ©2019 Cartoon Network. ©2019 Playmates. Playmates International Company Ltd. 23/F, The Toy House, 100 Canton Road, TST, Kowloon, Hong Kong. PRINTED IN CHINA.

Distributor - US Market Only
Playmates Toys Inc.
909 N. Pacific Coast Highway,
Ste 800 El Segundo, CA 90245
Email:
toys@playmatestoy.com



ben10toys

Catch Ben 10 on CARTOON NETWORK and unleash more alien super powers at BEN10.COM

For more detailed instructions visit www.Playmatestoy.com