

Size: 11.75" x 8.25"  
Color: Black



## Ticklish Tess

If your Tiny Toes doll does not work, try resetting.

### To Reset:

Slide the switch to "OFF", then slide the switch to the "ON" mode. If Tiny Toes are still not working, try replacing the battery.

### To change batteries:

- Unscrew battery cap.
- Take out old batteries and replace with 4 new AG13/LR44 batteries.
- Replace battery cap.

### Battery Instructions:

- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Batteries are to be removed from the toys when not in use.
- Do not dispose of batteries in fire.
- Do not use rechargeable batteries.

Adult supervision is required to replace batteries.

**Batteries Regulation:** Do not mix old and new batteries.

 

Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Under the environment with severe electrostatic discharge, the product may malfunction and requires user reset.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

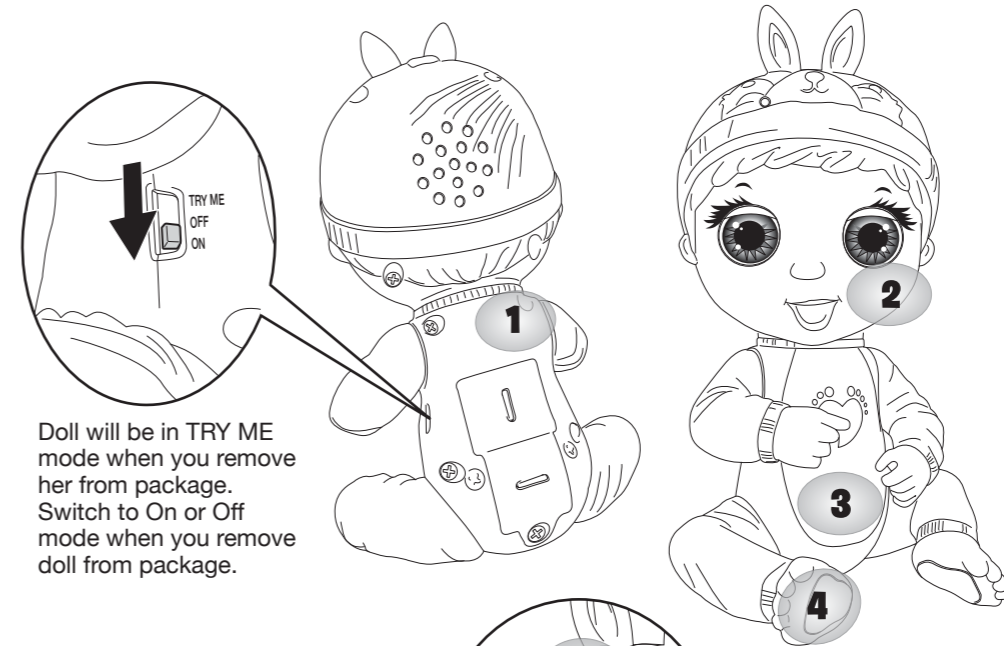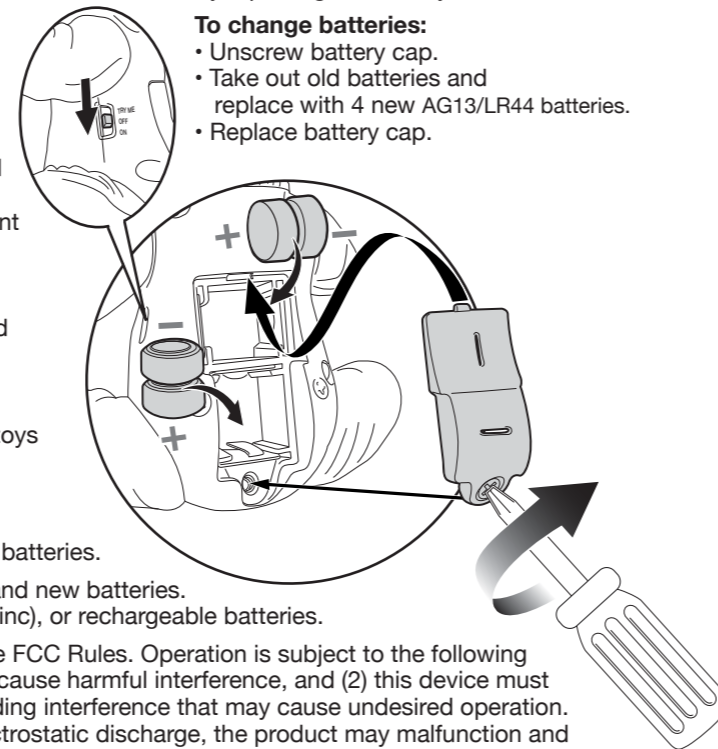

Doll will be in TRY ME mode when you remove her from package. Switch to On or Off mode when you remove doll from package.

Tiny Toes dolls have 6 sensors.

 1. **BACK** – tap/touch upper back to activate burp sound. Back sensor is disabled when doll is tilted on her back/sleeping.
2. **CHEEK** – touch/swipe left cheek to activate kissing. If you keep finger on cheek, doll will give you a surprise sound.
3. **TUMMY** – touch lower tummy area.
4. **RIGHT FOOT** – touch or swipe middle of foot.
5. **LIGHT SENSOR** – hole near eye on hat allows light in. If you cover with your hand or finger, and then remove your hand, this will activate peekaboo sounds.
6. **SLEEP SENSOR** – rock doll with front and back motion several times to activate sleep mode.

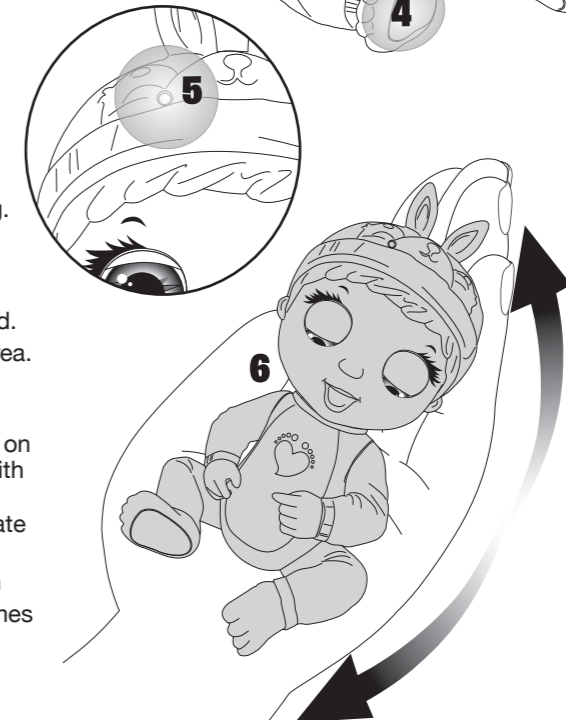

Ages 4 and up  
Asst. #56080  
Item #56082

Tiny Toes is a registered trademark of Playmates International Company Ltd.  
©2018 Playmates. Playmates International Company Ltd.  
23/F, The Toy House, 100 Canton Road, TST, Kowloon, Hong Kong. PRINTED IN CHINA.

